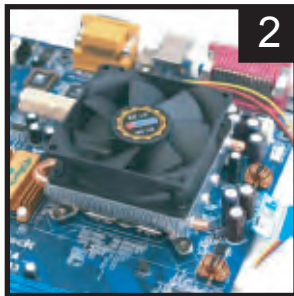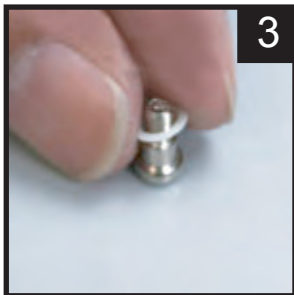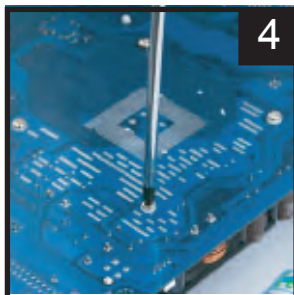**1** Apply the thermal grease evenly to the CPU.
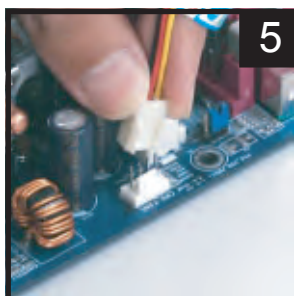
2 Place the cooler and align it with the holes of the motherboard.

3 Place the washers over the screws.

4 Insert the screws from the back of the motherboard and tighten them.

5 Connect the fan's connector to the motherboard.